



CON1

- 1:GLIDE1
- 2:Run/Stop SW.(open .. Run)
- 3:Int/Ext SW.(open .. Int)
- 4:GLIDE2
- 5:CH1 VR2
- 6:CH2 VR2
- 7:CH3 VR2
- 8:CH4 VR2
- 9:CH5 VR2
- 10:CH6 VR2
- 11:CH7 VR2
- 12:CH8 VR2

CON2

- 1:Tempo LED
- 2:Upper CH - for CH LED
- 3:Lower CH - for CH LED
- 4:GND (for Tempo LED)
- 5:CH1&5 LED
- 6:CH2&6 LED
- 7:CH3&7 LED
- 8:CH4&8 LED

CON3

- 1:CH VR1
- 2:CH VR3
- 3:TempoVR1
- 4:TempoVR2
- 5:TempoVR3(GND)

CON4

- 1:MIDI IN Din5
- 2:MIDI IN Din4
- 3:GND
- 4:BLANK
- 5:CV
- 6:BLANK or battery

SQ-150 Revision A
(2008/11/15)